


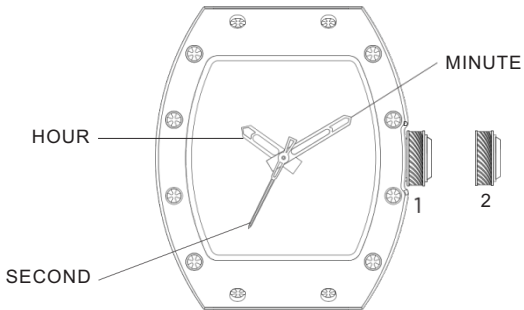

Self-Developed Mechanical Movement 2805

How to Set the Time

1. Pull crown out to position 2.
2. Turn the crown to adjust the time.
3. Return crown to position 1.

AUTOMATIC WINDING MOVEMENT

A timepiece fitted with a mechanical (Automatic) winding movement obtains the power to wind itself by the movement of your wrist. When fully wound, your timepiece has a power-reserve of approximately 38 hours. If the timepiece has not been worn for over 38-hours, it is advised that it be manually wound to ensure necessary power-reserve. To manually wind, keep the crown in position 1 and then turn it clockwise, 10 to 20 times.

Important Note:

As with every mechanical timepiece, if present, the automatic day/date calendar is automatically adjusted by a complicated mechanism that is triggered between 10PM and 2AM. It is important to avoid any adjustment of the day/date calendar setting operation and any backward movement of the watch hands during this period of time.

To ensure longevity and accuracy it is recommended to have your mechanical timepiece over-hauled by a qualified technician every 3 - 5 years.